


# BATTERY COOLING FAN RELAY INSPECTION

BA00E-01

## 1. REMOVE BATTERY COOLING FAN RELAY

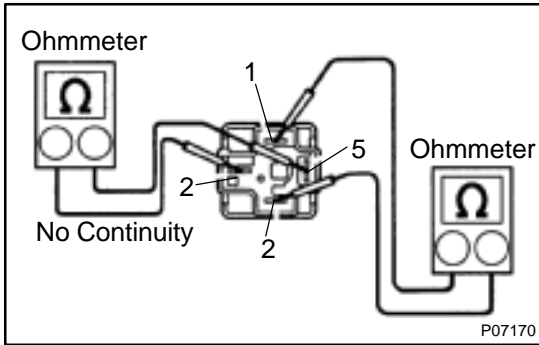


## 2. INSPECT BATTERY COOLING FAN RELAY CONTINUITY

(a) Using an ohmmeter, check that there is continuity between terminals 1 and 2.

If there is no continuity, replace the relay.

(b) Check that there is no continuity between terminals 3 and 5.

If there is continuity, replace the relay.

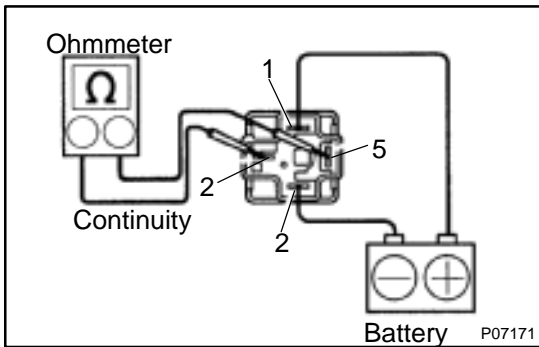

## 3. INSPECT BATTERY COOLING FAN RELAY OPERATION

(a) Apply battery positive voltage to terminals 1 and 2.

(b) Using an ohmmeter, check that there is continuity between terminals 3 and 5.

If there is no continuity, replace the relay.

## 4. REINSTALL BATTERY COOLING FAN RELAY